LET'S GO AERO
Gear Management Solutions ™

2120 Naegele Road Colorado Springs, CO 80904
Visit our website at www.LetsGoAero.com

ArcHaus™ Shelter

Model No. SAR024

User Manual

Walk-In/Walk-Out Shelter & Side Room
10'L x 6'W x 76''H / 3.04m x 1.82m x 1.93m

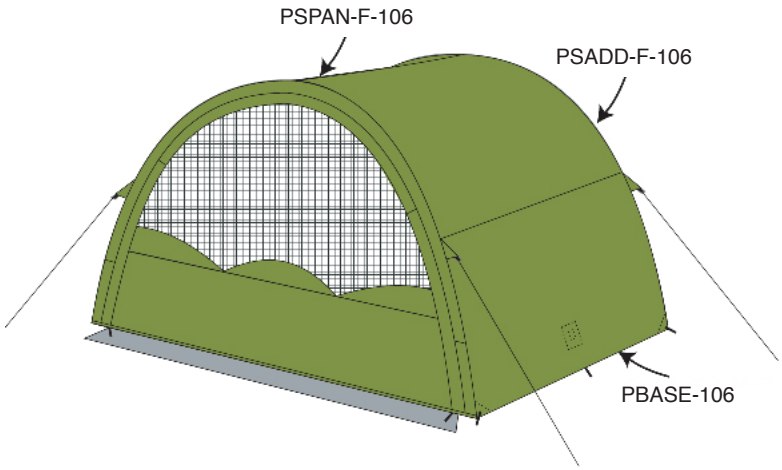

QTY	DESCRIPTION	PART NUMBER
	FABRIC BODY:	
1	Arc Cover (tent body)	COV-GRN
2	Door Panel w/ mesh	PANL-GRN
	POLES & STRAPS:	
2	Saddle Poles, Fiberglass, shock-corded Tent Pole w/connector ferrules - black	PSADD-F-106
5	Spanner Poles, Fiberglass, shock-corded Tent Pole w/ C-clips - black	PSPAN-F-106
2	Base U-Tube Poles, Steel, chain-corded base Tent Pole - black	PBASE-S-106
2	Web Strapping w/ quick clips attached	WEBSTRAP-106
	CARRY BAG:	
1	Carry bag - green	CBAG-106
	UNIVERSAL PARTS: (Some attached to fabric)	
1	Pole Bag	PBAG-36IN
1	Stake Bag; 10.5in	SBAG-11IN
4	Guy Lines; 2.5M	GROPE-2.5M
2	Guy Lines; 5.0M	GROPE-5M
	STAKES:	
1	Stake Set of ten, 7 in. steel stakes	SSET-10ST-7IN
1	Stake Set of four, 12 in steel stake	SSET-T120G-12IN

Review your parts list above to make sure all parts have been included in your package.
For assistance, do NOT return product to store.
Call Let's Go Aero: 719-630-3800 or 877-464-2376 Monday-Friday 8:30-5:00 pm MST.
Mention your Model Number so our Representative may assist you.
For additional product information and related accessories, visit our website:
www.LetsGoAero.com

TENTRIS ARCHAUS

SAR024 1214

US Patent No. 8,001,987; patents pending.

ASSEMBLY INSTRUCTIONS

Step 1: Frame Layout

Proper Frame layout is essential to make to sure the ArcHaus sets up correctly and to prevent damage.

Parts

(Qty: 2) Base U-Tube Poles (PBASE-S-106) (Steel chained-corded base tent pole).
(Qty: 2) Webbing Straps (WEBSTRAP-106)(Webbing with quick clips attached, length adjustable)

Adjust Webbing Straps length for a tensioned fit for enhance structural strength and zipper support.

Step 2: Arc Saddle Assembly

Parts

(Qty: 2) Saddle Poles, shock-corded (PSADD-F-106) (Tent Pole with connector ferrules)

Connect Saddle Poles to each end of U-Tubes. Stand on Webbing Straps while inserting Saddle Poles.

Step 3: Cover Install

Parts

(Qty: 5) Spanner Poles, shock-corded (PSPAN-F-106) (Tent pole with C-Clips).
(Qty: 1) Arc Cover (Tent Body)

- Unzip both door end panels to remove them from the Arc Cover
- Lay Arc Cover inside Frame perimeter
- Slide Spanner Pole under center of cover, lift cover and clip center pole onto Saddle tubing.
- Repeat with the remaining four poles.

Step 4: Position Fitted Cover

- Align Cover seams with Saddle tubing to center cover.
- Position ground fabric and bungee cord under and around U-Tube ends.
- Align U-Tube corner tubing in the cover's reinforced corners
- Connect the cord ring and bungee hook in each corner. The cord ring must be oriented *to the inside* of the Saddle Poles as shown in diagram below.